EUREKA

The Boss Brush Up

Household Type

Owner's Guide

Model 57

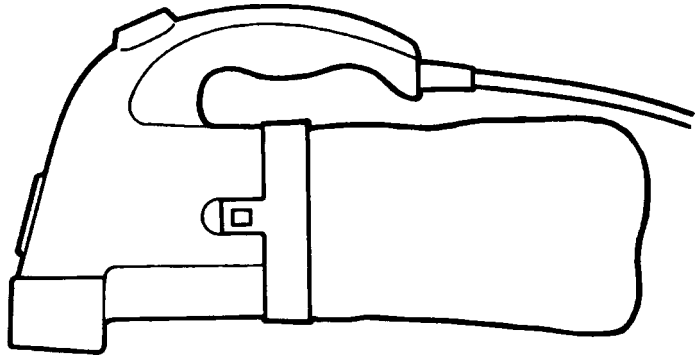

Index

Important Safeguards 2
General Information 4
Use 4
Dust Bag 5
Brush Roll 5
Brush Roll Belt ..... 5 & 6
Order Form 7
Warranty ..... 9 & 10

©1997 The Eureka Company
Div. of WCI
Printed in U.S.A.

Part No. 59309

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not leave vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dust bag in place.
- Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.

GENUINE
EUREKA PRODUCT

Questions & Answers about Genuine Eureka Products

Q: Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?
A: Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

Q: How can I be sure I am using only genuine Eureka products in my vacuum cleaner?
A: Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

Q: Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?
A: Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

For Genuine Eureka Value, Accept No Imitations!

THE EUREKA COMPANY

Bloomington, Illinois 61701

Household Warranty
abs 190

CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.

AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique, ou de blessure:

- Ne pas utiliser à l'extérieur ou sur des surfaces mouillées.
- Fermez le commutateur et débranchez l'appareil lorsque vous ne l'utilisez pas ou avant le nettoyage ou l'entretien.
- Ne permettez pas qu'il soit utilisé comme jouet. Une attention particulière est nécessaire lorsque utilisé par ou prés d'un enfant.
- Suivez les recommandations d'utilisation de ce manuel. Utilisez uniquement les accessoires recommandés par le fabriquant.
- Ne pas utiliser si le cordon ou la fiche sont endommagés. Si l'aspirateur ne fonctionne pas comme il le devrait, s'il a été échappé, s'il est endommagé, s'il a été laissé à l'extérieur ou échappé dans l'eau, retournez-le à un centre de service avant d'utiliser.
- Ne pas le tirer ou le transporter par le cordon, ne pas utiliser le cordon en guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des coins ou bordures pointus. Ne pas circuler sur le cordon avec l'aspirateur. Tenir le cordon à distance des surfaces chauffantes.
- Ne pas utiliser des rallonges ou des prises qui n'ont pas de capacité suffisante pour transporter le courant.
- Fermer tous les contrôles avant de débrancher.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, tenez la fiche et non le cordon.
- Ne pas manipuler la fiche ou l'aspirateur avec les mains mouillées.
- Ne pas rien insérer dans les ouvertures. Ne pas utiliser si des ouvertures sont bloquées; assurez-vous qu'elles soient dégagées de poussière, mousse, cheveux ou toute autre chose qui pourrait réduire le passage de l'air.
- Cet aspirateur crée de la succion et contient un rouleau-brosse tournant. Tenir les parties mobiles et les ouvertures loin des cheveux, du linge, des doigts et de toute partie du corps.
- Ne pas ramasser des objets qui brûlent ou fument comme les cigarettes, alumettes ou cendres chaudes.
- N'utilisez pas sans le sac de poussière en place.
- Les poulies du courroie peuvent devenir chaudes pendant l'utilisation normale. Pour prevenir des brûlures, évitez de touché la poulie du courroie lorsque vous réparez la courroie.
- Portez une attention particulière lorsque vous nettoyez les escaliers.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles comme de l'essence: Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Entreposez votre aspirateur à l'intérieur dans un endroit propre et sec.
- Maintenez un bon éclairage à l'endroit où vous travaillez.
- Débrancher les appareils électrique avant de les balayer.

CONSERVEZ CES INSTRUCTIONS

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Afin de réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne peut être insérée dans la prise, retourner la fiche. Si la fiche ne peut toujours pas être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié. Ne pas modifier la fiche.

GENERAL INFORMATION

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects with the cleaner to avoid bag breakage, hose clogging, or possible motor damage.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial numbers when you call:**

1-800-282-2886*

***En Mexico llame al 254 23 52**

If you prefer, you can write to The Eureka Company, Bloomington, Illinois 61701. Refer to The Eureka Warranty for complete service information.

DO NOT OIL the motor at any time. The bearings are permanently lubricated and sealed.

Rating Plate

The model, type, and serial numbers are indicated on the rating plate located on the back side of the cleaner. For prompt and complete service information, always refer to these numbers when inquiring about service.

MODEL	TYPE	SERIAL NO.
VOLTS	AMPS.	HERTZ

SERVICE INFORMATION: 1-800-282-2886

THE EUREKA COMPANY
BLOOMINGTON, ILLINOIS 61701

Model & Type_____

Serial No. _____

HOW TO USE

This lightweight hand held vacuum cleaner is designed for quick and easy cleaning. The cleaner provides suction and brush action to clean dirt, lint, and threads from surfaces.

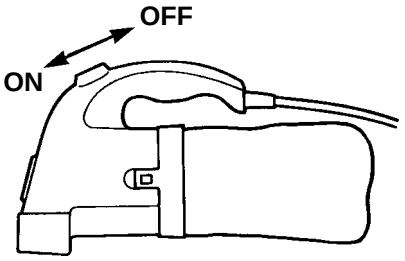

Power Switch

The power switch is located on top of the handle. Slide switch forward to turn motor ON; slide back to turn motor OFF.

Cord Storage

Wrap cord loosely around vacuum cleaner for storage.

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, and brush roll bristles
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What The Eureka Company Will Do

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station.
You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners–Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."
For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

USA: 1-800-282-2886
Mexico: 254 23 52
Canada: 1-800-661-9913

If you prefer, you can write to THE EUREKA COMPANY, Bloomington, Illinois 61701.
If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station.
Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

HOW TO MAINTAIN

Routine maintenance helps avoid unnecessary service calls. Be sure to check dust bag and brush roll belt often to be certain vacuum cleaner works properly.

Detachable Dust Bag

The dust bag should be emptied often especially when vacuuming plaster dust or fine sand. The fine particles clog bags and restrict air movement decreasing the cleaning efficiency of the vacuum cleaner.

NOTE: Turn off power switch and unplug electrical cord before cleaning dust bag. Never operate vacuum cleaner without dust bag.

1. Lift hook on each side of bag to release bag.
2. Shake bag contents into suitable container. ***If further cleaning is desired, brush inside of bag with a whisk broom.***
3. Push bag over unit and press until hooks snap over tabs.

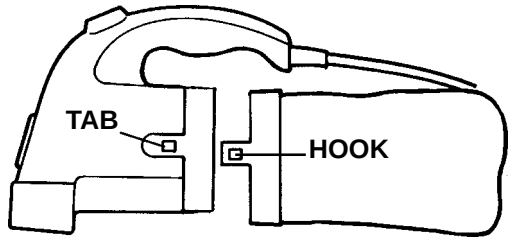

NOTE: Never wash or dry clean cloth bag.

Brush Roll

As the brush roll rotates it sweeps and picks up particles of dust. Keep brush roll free from hair or thread so it continues to clean.

NOTE: Turn off power switch and unplug electrical cord before cleaning brush roll.

Brush Roll Belt

The brush roll belt rotates the brush roll to provide better cleaning. The belt should be checked regularly. Replace belt when it appears to be stretched or cracked and not turning the brush roll properly.

NOTE: Turn off power switch and unplug electrical cord before replacing belt. Belt pulleys can become hot during normal use. To prevent injury, avoid touching belt pulley when servicing drive belt.

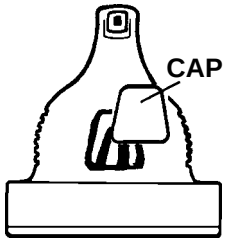

1. Pull flexible cap from front of nozzle.

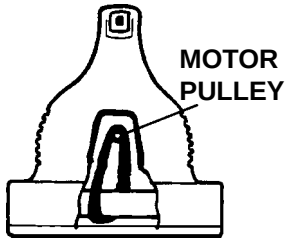

2. Rotate belt off motor pulley

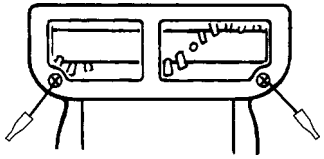

3. Remove two screws from underneath side of nozzle. Lift off bottom plate.

Brush Roll Belt *(continued)*

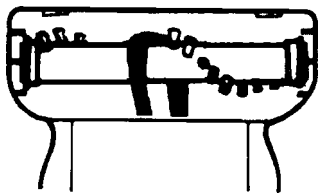

4. Pull up on brush roll; discard used belt.

SHORT SIDE

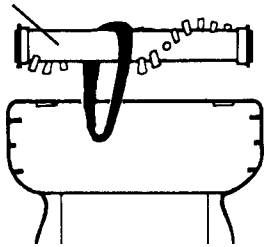

5. Place new belt around brush roll.

6. Position brush roll with shortest section of bristle on left side.

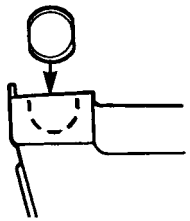

7. Push brush roll end caps into nozzle, round edge to top and bottom.

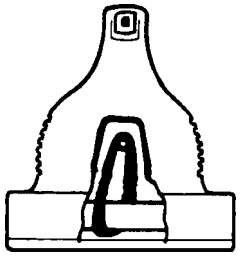

8. Grasp belt from front opening; *be sure belt rotates between brush roll bristles.*

9. Stretch and rotate belt from back side of brush roll around right side of motor pulley.

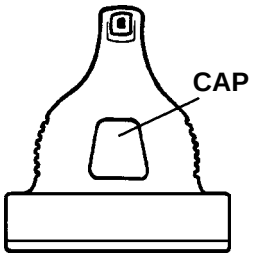

10. Replace front cap.

11. Place bottom plate screw tabs inside nozzle. Press front of nozzle until it snaps securely in place.

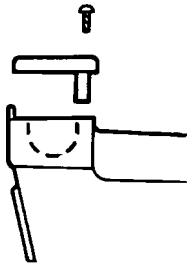

12. Tighten screws.

ORDER FORM 2/98

EUREKA *VACUUM CLEANERS*

The Eureka Company
1201 E. Bell St.
Bloomington, ILL 61701-2799

SOLD TO
Name
Address (street address needed for UPS)
City State Zip
Telephone (Day) (Eve) (Fax)

SHIP TO
Name
Address (street address needed for UPS)
City State Zip
Telephone (Day) (Eve) (Fax)

Model No.

Type:

Serial Number:

IMPORTANT: Be sure to include your model, type, and serial number. These numbers may be found on the rating plate.

Item	Part No.	Qty.	Price	Total
Genuine Eureka Parts				
Brush Roll	54855-1		9.40	
Drive Belt (package of 2)	60300		2.49	
Replacement Dust Bag	15203-1		4.65	

Total (prices subject to change without notice)

Tax (add state tax & local taxes as required by law)

Postage & Handling Charge (within U.S.A.) **3.50**

TOTAL

TOTAL ENCLOSED

Method of payment (no C.O.D. orders)

☐ **Check or money order** (payable to **The Eureka Company**). Do not send currency.
☐ **Charge to my** ☐ **Visa** (13/16 digits) ☐ **MasterCard** (13 digits) ☐ **Amer. Express** (15 digits)

Acct. number | Expiration Date

Signature (full name as shown on acct.)

To Order

By Phone
1-800-438-7352*
HOURS:
Call between 8 a.m. and 4:45 p.m. central standard time

*En Mexico Llame 254 23 52

By Mail

Simply fill out this Order Form. Please be sure to include day and evening phone numbers.

To Answer Problems or Questions
1-800-282-2886*
Monday through Saturday, 7 a.m. to 8 p.m. central standard time.

© 1996 The Eureka Company
Div. of WCI
Bloomington, IL 61701

Printed in U.S.A.
Part No. 59332